



**HERCULUX**  
恒坤光电

Chengdu HercuLux Photoelectric  
Technology Co.,Ltd  
**Product Approval**


Approval number :

---

Customer :

PN	Code	Product
HK-83@22-15-D12-20-1g-1	1. 01. 6874	HK 83@22-15° Lens
HK-83@22-24-D12-20-1g-1	1. 01. 6875	HK 83@22-24° Lens
HK-83@22-36-D12-20-1g-1	1. 01. 6876	HK 83@22-36° Lens
HK-83@22-60-D12-20-1g-1	1. 01. 81516	HK 83@22-60° Lens

Manufacturer : Chengdu HercuLux Photoelectric Technology Co.,Ltd

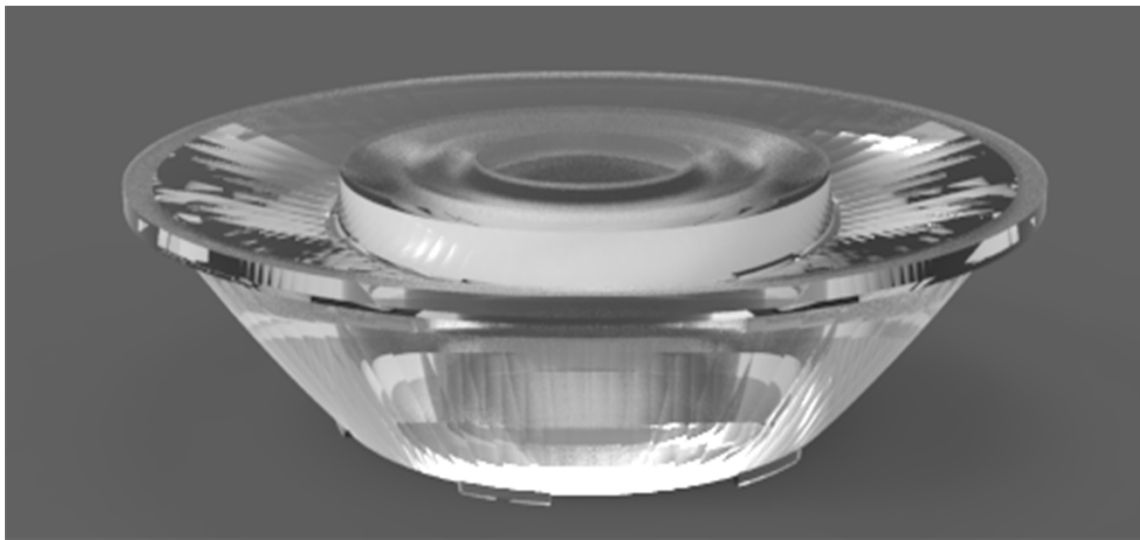

Supplier confirmation				Client confirmation			
Proposed		DATE		Qualified <input type="checkbox"/>		DATE	
Project manager		DATE		Unqualified <input type="checkbox"/>		DATE	
Audit		DATE		Audit		DATE	
Approved		DATE		Approved		DATE	
Stamp		DATE		Stamp		DATE	

( Confirmation of acceptance by both parties must be signed and sealed )

Factory: Chengdu Shuangliu District, Iot industrial park 2 road HercuLux Photoelectric Park

Phone : 028-85887727 ( 801 ) 028-85887990 ( 801 )

Fax : 028-85887730

www.hkoptics.com

Sales Dept: Shenzhen Nanshan District Nanshan Cloud Valley Innovation Industrial Park Comprehensive Service Building,

TEL: 0755-2937 1541

FAX: 0755-2907 5140

---

\*Approval In duplicate , for both supplier and customer.

---



**HERCULUX**  
恒坤光电

# Product Approval


TEL: 0755-2937 1541

FAX: 0755-2907 5140

www.hkoptics.com

Date updated: 2022/3/3

Product Picture:	
PN:	HK-83@22-15-D12-20-1g-1
Size(L*W*H/Φ*H):	Φ:83mm; H:22.4mm
Material:	PC
Efficiency:	\
Temperature(Topr):	Material extreme temperature resistance : -40°C to +120°C long-term use temperature : -40°C to +100°C
FWHM:	15°/24°/36°/60°
Matched LES:	D12

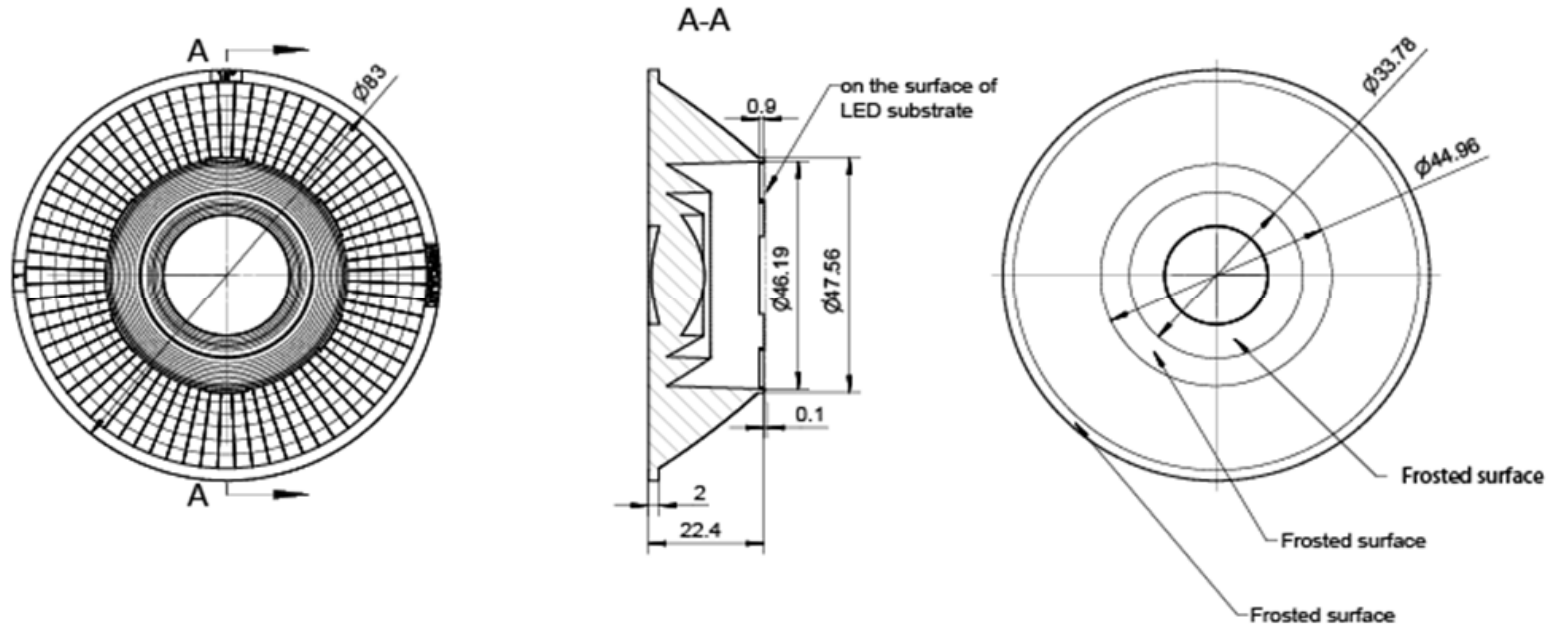


**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.
- \*4. When the lamp adopts rubber ring for waterproofing: the roughness of the contact surface between the radiator and the rubber ring is required:  $Ra < 3.2\mu m$

Optical design			HK 83@22-15°Lens		HK-83@22-15-D12-20-1g-1		
Structure design			HK 83@22-15°Lens		1.01.6874		
Review					number of draw	qty	weight
Validation			Material:	PC	CDHK		

MT5 Tolerance table	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450	
	tolerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0	

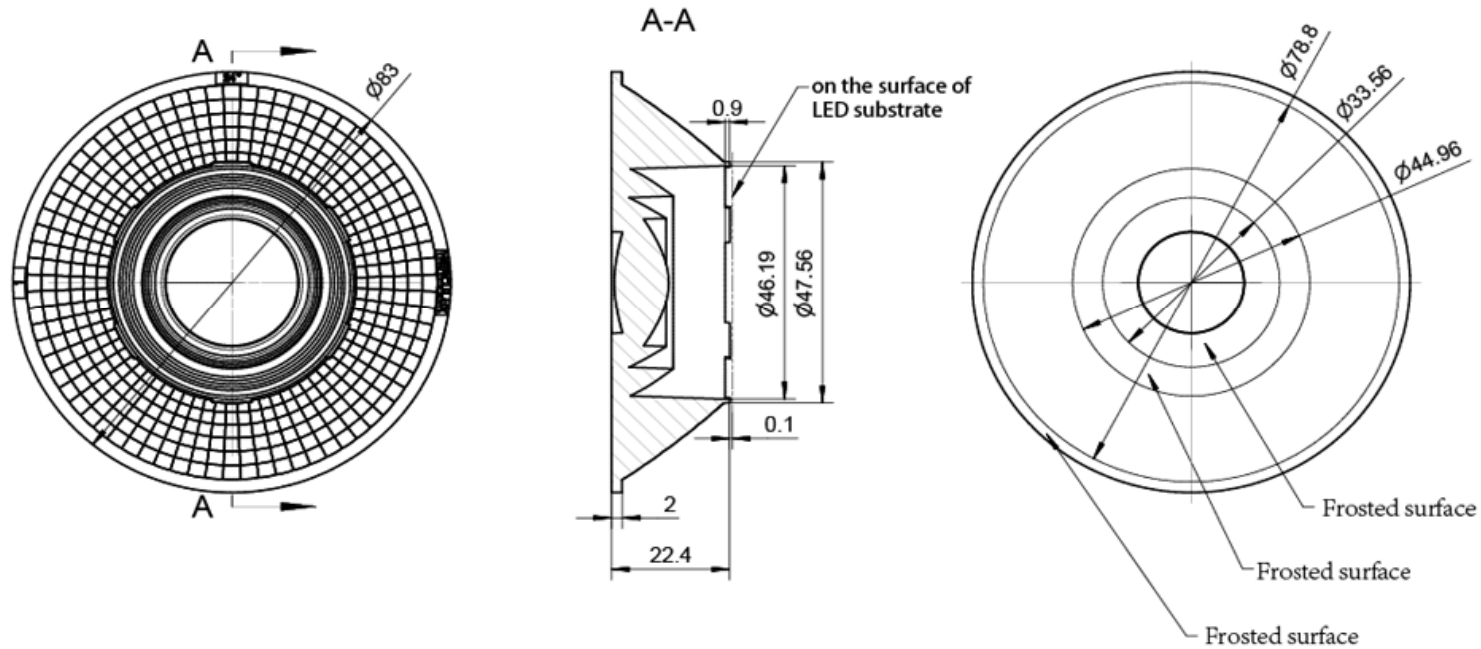


**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.
- \*4. When the lamp adopts rubber ring for waterproofing: the roughness of the contact surface between the radiator and the rubber ring is required: Ra<3.2μm

Optical design			HK 83@22-24°Lens		HK-83@22-24-D12-20-1g-1		
Structure design					1.01.6875		
Review					number of draw	qty	weight
Validation			Material:	PC	CDHK		

MT5 Tolerance table	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450	
	tolerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0	

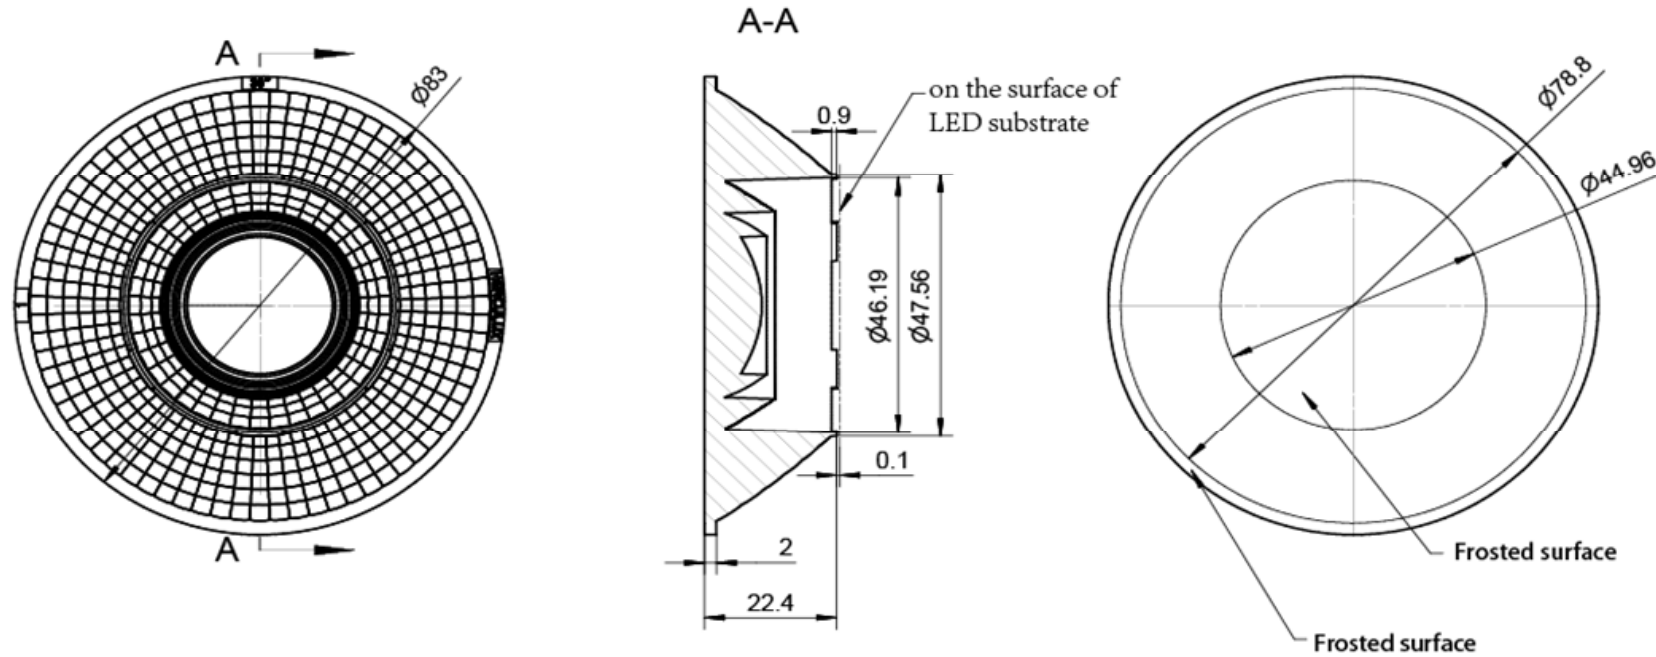


**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.
- \*4. When the lamp adopts rubber ring for waterproofing: the roughness of the contact surface between the radiator and the rubber ring is required:  $Ra < 3.2\mu m$

Optical design			HK 83@22-36°Lens		HK-83@22-36-D12-20-1g-1		
Structure design					1.01.6876		
Review					number of draw	qty	weight
Validation			Material:	PC	CDHK		

MT5 Tolerance table	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450	
	tolerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0	


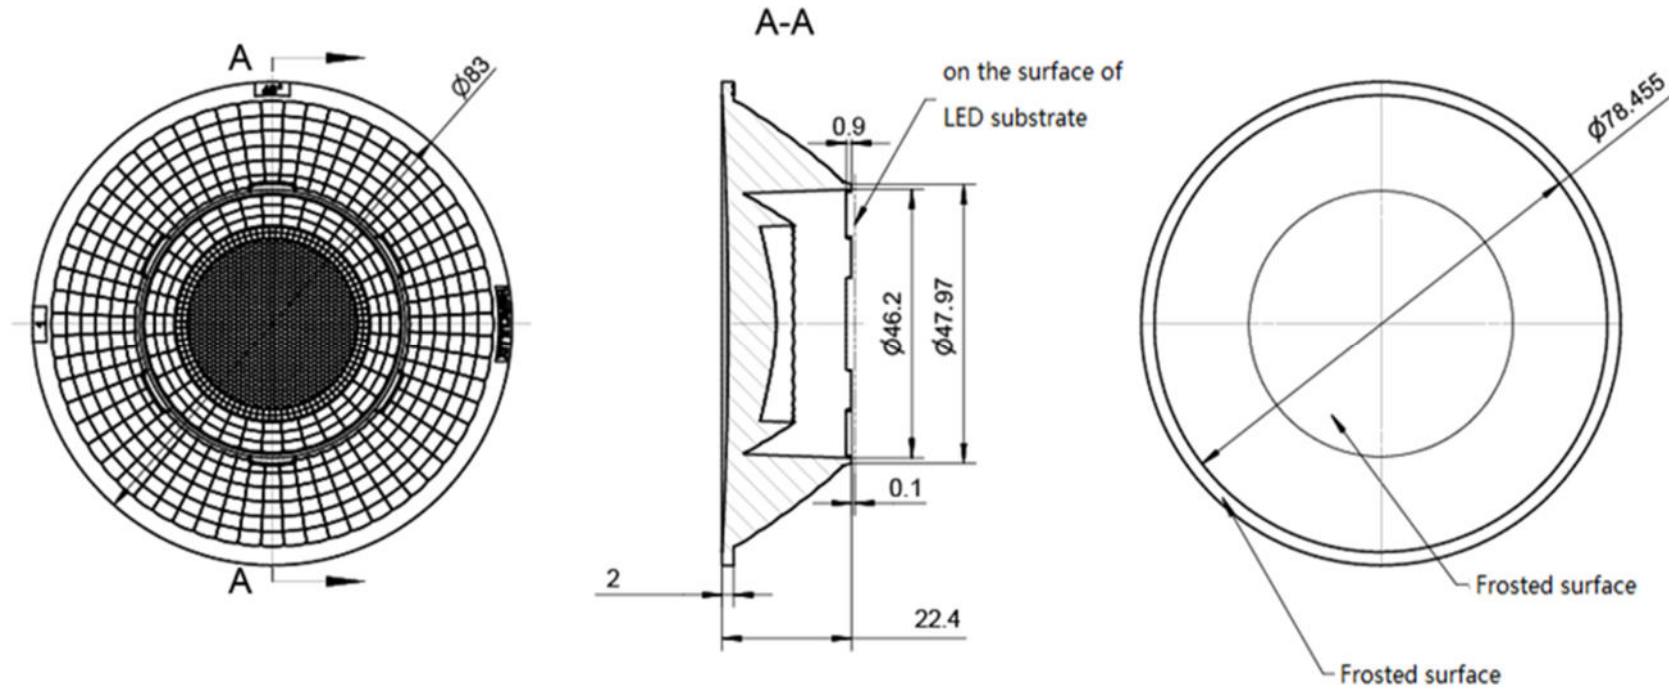


**Technical remark:**

1. The 3D map is not indicated for rounded corners and draft angle.
2. The dimensional tolerances are not specified according to GB/T 14486 2008 MT5.
3. The surface has no flash, shrinkage, bubbles and other defects.
- \*4. When the lamp adopts rubber ring for waterproofing: the roughness of the contact surface between the radiator and the rubber ring is required:  $Ra < 3.2\mu m$

Optical design			HK 83@22-60°Lens		HK-83@22-60-D12-20-1g-1		
Structure design					1.01.81516		
Review					number of draw	qty	weight
Validation			Material:	PC	CDHK		

MT5 Tolerance table	Basic size	<3	3~10	10~24	24~65	65~140	140~250	250~450	>450
	tolerance val	±0.1	±0.15	±0.20	±0.35	±0.50	±0.80	±1.2	±2.0

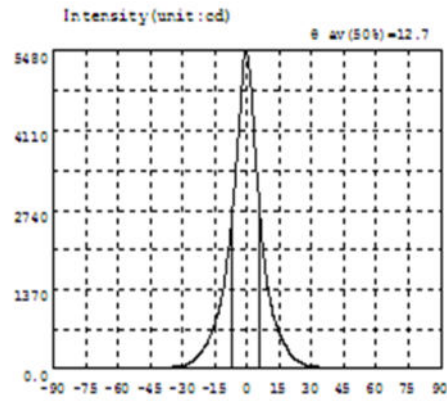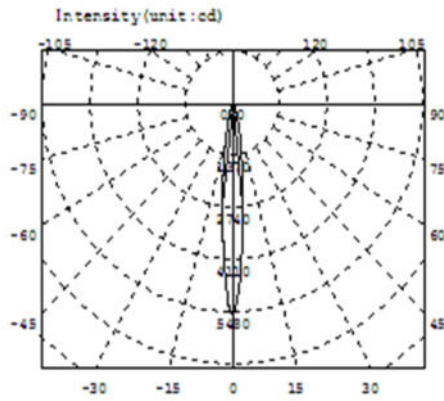

Intensity data:(deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.9588	-58.5	10.16	-27.0	99.91	4.5	3468	36.0	30.06	67.5	8.035
-88.5	1.445	-57.0	10.59	-25.5	131.4	6.0	2743	37.5	26.55	69.0	7.351
-87.0	1.875	-55.5	11.70	-24.0	174.6	7.5	2075	39.0	23.55	70.5	6.604
-85.5	2.348	-54.0	11.56	-22.5	231.2	9.0	1597	40.5	21.12	72.0	5.829
-84.0	2.687	-52.5	12.07	-21.0	305.5	10.5	1251	42.0	19.06	73.5	5.116
-82.5	3.041	-51.0	12.84	-19.5	391.4	12.0	985.1	43.5	17.40	75.0	4.610
-81.0	3.560	-49.5	13.67	-18.0	494.3	13.5	788.5	45.0	16.06	76.5	4.418
-79.5	4.022	-48.0	14.65	-16.5	619.8	15.0	634.1	46.5	14.76	78.0	4.014
-78.0	4.410	-46.5	15.85	-15.0	774.5	16.5	513.5	48.0	13.76	79.5	3.633
-76.5	4.864	-45.0	17.23	-13.5	952.4	18.0	407.0	49.5	12.80	81.0	3.069
-75.0	5.055	-43.5	18.73	-12.0	1182	19.5	301.8	51.0	12.01	82.5	2.667
-73.5	5.705	-42.0	20.61	-10.5	1494	21.0	225.9	52.5	12.85	84.0	2.398
-72.0	6.532	-40.5	22.99	-9.0	1917	22.5	171.6	54.0	12.79	85.5	2.024
-70.5	7.463	-39.0	25.79	-7.5	2420	24.0	129.8	55.5	10.40	87.0	1.612
-69.0	8.307	-37.5	28.97	-6.0	3063	25.5	99.27	57.0	9.834	88.5	1.309
-67.5	8.925	-36.0	32.88	-4.5	3729	27.0	78.15	58.5	9.377	90.0	0.9055
-66.0	9.214	-34.5	38.00	-3.0	4523	28.5	64.27	60.0	9.069		
-64.5	9.361	-33.0	44.42	-1.5	5294	30.0	54.00	61.5	8.851		
-63.0	9.393	-31.5	52.01	0.0	5445	31.5	45.92	63.0	8.810		
-61.5	9.540	-30.0	62.36	1.5	5046	33.0	39.43	64.5	8.656		
-60.0	9.784	-28.5	77.36	3.0	4232	34.5	34.30	66.0	8.443		

Electricity Parameter:



Current I: 0.1000A      Power: 3.369W  
Voltage V: 33.70V      PF: 0.000

Optical Parameter(Distance=2.410m):

Equivalent Luminous flux:  $\Phi_{eff}$  = 585.7lm      Efficiency: Eff=173.85lm/W  
Diffuse angle:       $\theta$ (25%): 20.9deg  $\theta$ (50%): 12.7deg  $\theta$ (75%): 6.9deg  $\theta$ (50%): 12.7deg  
Diffuse angle:       $\theta$ (25%): 20.9deg  $\theta$ (50%): 12.7deg  $\theta$ (75%): 6.9deg  $\theta$ (50%): 12.7deg  
Imax=5471cd (C=0.0deg,G=-0.5deg)      C0-180Plane Imax= 5471cd(G=-0.5deg)  
C0-180Plane I0= 5445cd





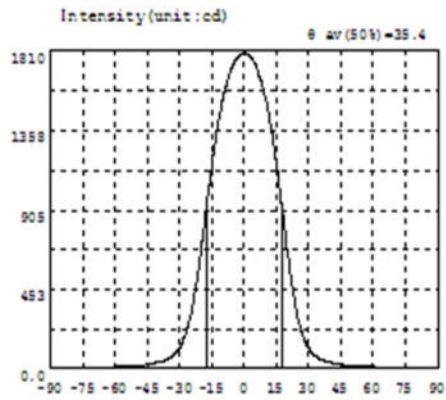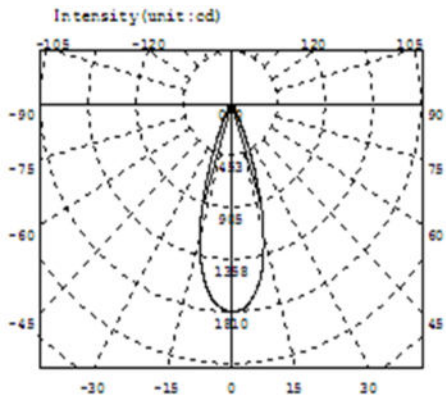

Intensity data:(deg , cd) C0-180

A	I	A	I	A	I	A	I	A	I	A	I
-90.0	0.4459	-58.5	13.46	-27.0	206.0	4.5	1758	36.0	53.44	67.5	8.975
-88.5	0.5737	-57.0	14.50	-25.5	268.6	6.0	1715	37.5	45.84	69.0	8.372
-87.0	0.8701	-55.5	15.52	-24.0	350.8	7.5	1661	39.0	40.07	70.5	7.767
-85.5	1.688	-54.0	16.58	-22.5	454.6	9.0	1599	40.5	35.50	72.0	7.167
-84.0	2.490	-52.5	17.83	-21.0	576.8	10.5	1521	42.0	31.86	73.5	6.618
-82.5	3.181	-51.0	19.17	-19.5	715.7	12.0	1425	43.5	28.81	75.0	6.102
-81.0	3.867	-49.5	20.66	-18.0	862.0	13.5	1310	45.0	26.28	76.5	5.604
-79.5	4.403	-48.0	22.41	-16.5	1009	15.0	1181	46.5	24.18	78.0	5.083
-78.0	4.900	-46.5	24.37	-15.0	1148	16.5	1041	48.0	22.31	79.5	4.583
-76.5	5.412	-45.0	26.52	-13.5	1277	18.0	892.3	49.5	20.58	81.0	4.089
-75.0	5.935	-43.5	29.03	-12.0	1393	19.5	743.7	51.0	19.14	82.5	3.484
-73.5	6.447	-42.0	31.95	-10.5	1497	21.0	599.1	52.5	17.84	84.0	2.779
-72.0	6.985	-40.5	35.65	-9.0	1579	22.5	472.8	54.0	16.65	85.5	2.047
-70.5	7.600	-39.0	40.20	-7.5	1647	24.0	357.9	55.5	15.55	87.0	1.230
-69.0	8.211	-37.5	45.94	-6.0	1704	25.5	270.6	57.0	14.51	88.5	0.8729
-67.5	8.812	-36.0	53.31	-4.5	1746	27.0	206.3	58.5	13.59	90.0	0.7171
-66.0	9.490	-34.5	63.26	-3.0	1771	28.5	157.7	60.0	12.72		
-64.5	10.17	-33.0	76.45	-1.5	1792	30.0	121.6	61.5	11.86		
-63.0	10.87	-31.5	94.90	0.0	1803	31.5	95.28	63.0	11.07		
-61.5	11.68	-30.0	120.6	1.5	1797	33.0	76.68	64.5	10.32		
-60.0	12.52	-28.5	157.4	3.0	1782	34.5	63.32	66.0	9.636		

Electricity Parameter:

Current I: 0.1000A      Power: 3.410W  
Voltage V: 34.09V      PF: 0.000

Optical Parameter(Distance=2.559m):

Equivalent Luminous flux:  $\Phi_{eff}$  = 711.1lm      Efficiency:  $Eff$  = 208.55lm/W  
Diffuse angle:  $\theta$  (25%): 45.2deg @ (50%): 35.4deg @ (75%): 25.4deg @ (50%): 35.4deg  
Diffuse angle:  $\theta$  (25%): 45.2deg @ (50%): 35.4deg @ (75%): 25.4deg @ (50%): 35.4deg  
Imax=1803cd (C=0.0deg,G=0.0deg)      C0-180Plane Imax= 1803cd(G=0.0deg)  
C0-180Plane I0= 1803cd




		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																				
1.Size	diameter	83	/	/	83.08	83	/	/	/	Test environment: In 20 °C -25 °C environment to achieve thermal equilibrium after the test.																																				
	height1	22.4	/	/	22.65	22.68	/	/	/																																					
	height2	20.4	/	/	20.57	20.54	/	/	/																																					
	Gate shear can not affect the appearance of the lamp																																													
See attachment "Appearance Inspection Standards"																																														
2.Appearance Quality	See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																							
			No stains	No stains	No stains	No stains																																								
3.Material	PC				Color	Transparent			OK																																					
4.Optical index	Testing LE	D12																																												
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																													
	FWHM	See light distribution curve																																												
	angle	/	12.7°	12.5°	/	/	/	/	/	/																																				
	K-value	/	9.40	9.30	/	/	/	/	/	/																																				
	Efficiency	/	85.09%	85.74%	/	/	/	/	/	/																																				
Facula	See the signature sample																																													
Comprehensive judgment	Qualified																																													
Remarks:		<p>1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual.</p> <p>2、 Ambient temperature on the size of the product refer to</p> <p>Precautions:</p> <ol style="list-style-type: none"> <li>Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.</li> <li>Try to avoid touching the total reflection surface when taking the lens.</li> <li>The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).</li> <li>The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that the upper surface temperature of the LED colloid should be less than 120 degrees</li> </ol>																																												
		<p style="text-align: center;"><b>PC product size changes with temperature table</b></p> <table border="1"> <caption>Data for PC product size changes with temperature table</caption> <thead> <tr> <th>Temperature (°C)</th> <th>50mm</th> <th>100mm</th> <th>150mm</th> <th>200mm</th> <th>250mm</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> </tr> <tr> <td>10</td> <td>0.10</td> <td>0.15</td> <td>0.20</td> <td>0.25</td> <td>0.30</td> </tr> <tr> <td>20</td> <td>0.20</td> <td>0.30</td> <td>0.40</td> <td>0.50</td> <td>0.60</td> </tr> <tr> <td>30</td> <td>0.30</td> <td>0.45</td> <td>0.60</td> <td>0.75</td> <td>0.90</td> </tr> <tr> <td>40</td> <td>0.40</td> <td>0.60</td> <td>0.80</td> <td>1.00</td> <td>1.20</td> </tr> </tbody> </table>									Temperature (°C)	50mm	100mm	150mm	200mm	250mm	0	0.00	0.00	0.00	0.00	0.00	10	0.10	0.15	0.20	0.25	0.30	20	0.20	0.30	0.40	0.50	0.60	30	0.30	0.45	0.60	0.75	0.90	40	0.40	0.60	0.80	1.00	1.20
Temperature (°C)	50mm	100mm	150mm	200mm	250mm																																									
0	0.00	0.00	0.00	0.00	0.00																																									
10	0.10	0.15	0.20	0.25	0.30																																									
20	0.20	0.30	0.40	0.50	0.60																																									
30	0.30	0.45	0.60	0.75	0.90																																									
40	0.40	0.60	0.80	1.00	1.20																																									

	Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																				
1.Size	diameter	83		82.86	82.88				Test environment: In 20 °C -25 °C environment to achieve thermal equilibrium after the test.																																				
	height1	22.4		22.45	22.44																																								
	height2	20.4		20.37	20.45																																								
	Gate shear can not affect the appearance of the lamp																																												
See attachment "Appearance Inspection Standards"																																													
2.Appearance Quality	See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																						
			No stains	No stains	No stains	No stains																																							
3.Material	PC			Color	Transparent		OK																																						
4.Optical index	Testing LE	D12																																											
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																												
	FWHM	See light distribution curve																																											
	angle		21.5°	20.6																																									
	K-value		5.20	5.30																																									
Efficiency		84.82%	85.56%																																										
Facula	See the signature sample																																												
Comprehensive judgment	Qualified																																												
Remarks:	<p>1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual.</p> <p>2、 Ambient temperature on the size of the product refer to</p> <div style="text-align: center;"> <p><b>PC product size changes with temperature table</b></p> <table border="1"> <caption>Approximate data from the graph</caption> <thead> <tr> <th>Temperature (°C)</th> <th>50mm</th> <th>100mm</th> <th>150mm</th> <th>200mm</th> <th>250mm</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> </tr> <tr> <td>10</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> </tr> <tr> <td>20</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> </tr> <tr> <td>30</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> </tr> <tr> <td>40</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> </tr> </tbody> </table> </div>									Temperature (°C)	50mm	100mm	150mm	200mm	250mm	0	0.00	0.00	0.00	0.00	0.00	10	0.05	0.05	0.05	0.05	0.05	20	0.10	0.10	0.10	0.10	0.10	30	0.15	0.15	0.15	0.15	0.15	40	0.20	0.20	0.20	0.20	0.20
Temperature (°C)	50mm	100mm	150mm	200mm	250mm																																								
0	0.00	0.00	0.00	0.00	0.00																																								
10	0.05	0.05	0.05	0.05	0.05																																								
20	0.10	0.10	0.10	0.10	0.10																																								
30	0.15	0.15	0.15	0.15	0.15																																								
40	0.20	0.20	0.20	0.20	0.20																																								
<p>1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.</p> <p>2. Try to avoid touching the total reflection surface when taking the lens.</p> <p>3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).</p> <p>4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that the upper surface temperature of the LED colloid should be less than 120 degrees.</p>																																													

	Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																				
1.Size	diameter	83		83	83				Test environment: In 20 °C -25 °C environment to achieve thermal equilibrium after the test.																																				
	height1	22.4		22.53	22.55																																								
	height2	20.4		20.52	20.48																																								
	Gate shear can not affect the appearance of the lamp																																												
See attachment "Appearance Inspection Standards"																																													
2.Appearance Quality	See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	OK																																						
			No stains	No stains	No stains	No stains																																							
3.Material	PC			Color	Transparent		OK																																						
4.Optical index	Testing LE	D12																																											
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																												
	FWHM	See light distribution curve																																											
	angle		35.8°	35.4°																																									
	K-value		2.50	2.53																																									
	Efficiency		86.64%	86.94%																																									
Facula	See the signature sample																																												
Comprehensive judgment	Qualified																																												
Remarks:	<p>1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual.</p> <p>2、 Ambient temperature on the size of the product refer to</p> <div style="text-align: center;"> <p><b>PC product size changes with temperature table</b></p> <table border="1"> <caption>Approximate data from PC product size changes with temperature table</caption> <thead> <tr> <th>Temperature (°C)</th> <th>50mm</th> <th>100mm</th> <th>150mm</th> <th>200mm</th> <th>250mm</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> </tr> <tr> <td>10</td> <td>0.05</td> <td>0.10</td> <td>0.15</td> <td>0.20</td> <td>0.25</td> </tr> <tr> <td>20</td> <td>0.10</td> <td>0.20</td> <td>0.30</td> <td>0.40</td> <td>0.50</td> </tr> <tr> <td>30</td> <td>0.15</td> <td>0.30</td> <td>0.45</td> <td>0.60</td> <td>0.75</td> </tr> <tr> <td>40</td> <td>0.20</td> <td>0.40</td> <td>0.60</td> <td>0.80</td> <td>1.00</td> </tr> </tbody> </table> </div>									Temperature (°C)	50mm	100mm	150mm	200mm	250mm	0	0.00	0.00	0.00	0.00	0.00	10	0.05	0.10	0.15	0.20	0.25	20	0.10	0.20	0.30	0.40	0.50	30	0.15	0.30	0.45	0.60	0.75	40	0.20	0.40	0.60	0.80	1.00
Temperature (°C)	50mm	100mm	150mm	200mm	250mm																																								
0	0.00	0.00	0.00	0.00	0.00																																								
10	0.05	0.10	0.15	0.20	0.25																																								
20	0.10	0.20	0.30	0.40	0.50																																								
30	0.15	0.30	0.45	0.60	0.75																																								
40	0.20	0.40	0.60	0.80	1.00																																								
<p>1. Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.</p> <p>2. Try to avoid touching the total reflection surface when taking the lens.</p> <p>3. The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).</p> <p>4. The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that the upper surface temperature of the LED colloid should be less than 120 degrees.</p>																																													





		Standard size	Upper Size limit	Lower size limit	Test result1	Test result2	Test result3	Test result4	Judgment	Remarks																																				
1.Size	diameter	83	/	/	82.91	82.84	/	/	/	Test environment: In 20 °C -25 °C environment to achieve thermal equilibrium after the test.																																				
	height1	22.4	/	/	22.56	22.57	/	/	/																																					
	thickness	2	/	/	2.15	2.11	/	/	/																																					
	Gate shear can not affect the appearance of the lamp																																													
See attachment "Appearance Inspection Standards"																																														
2.Appearance Quality	See attachment "Appearance Inspection Standards"	E	No burr	No burr	No burr	No burr	No burr	No burr	OK																																					
			No stains	No stains	No stains	No stains	No stains																																							
3.Material	PC				Color	Transparent			OK																																					
4.Optical index	Testing LE	D12																																												
	The recommended size and power rating of the LED light source recommended for this lens should be comparable to the source of the test, if it is required to be out of range. According to the heat dissipation capability of the lamp and the actual conditions of the use environment, the lens should be fully tested and tested to prevent the lens life.																																													
	FWHM	See light distribution curve																																												
	angle	/	60.5°	61.5°	/	/	/	/	/																																					
	K-value	/	/	/	/	/	/	/	/																																					
	Efficiency	/	88.81%	89.03%	/	/	/	/	/																																					
Facul	See the signature sample																																													
Comprehensive judgment	Qualified																																													
Remarks:	<p>1、 Tool Number: V-Vernier Caliper 2D-Quadratic H-Height Gauge M-Tool Microscope P-Needle T-Thick Gauge R-Radius Gauge E-Visual.</p> <p>2、 Ambient temperature on the size of the product refer to</p> <p>Precautions:</p> <ol style="list-style-type: none"> <li>Please wear clean gloves during the lens assembly process to prevent the lens surface from being contaminated.</li> <li>Try to avoid touching the total reflection surface when taking the lens.</li> <li>The lens surface is contaminated. Only use a soft cotton cloth dipped in analytically pure neutral solvent to wipe gently. Do not wipe with industrial solvents (alcohol, isopropanol, acetone, ether, toluene, xylene, carbon tetrachloride, MMA Body, etc.).</li> <li>The working temperature of the lens should be within the temperature resistance limit of the lens material. Exceeding the temperature resistance limit will cause the lens to crack or melt and affect the service life of the lens. It is recommended that the upper surface temperature of the LED colloid should be less than 120 degrees</li> </ol>																																													
	<p style="text-align: center;"><b>PC product size changes with temperature table</b></p> <table border="1"> <caption>Approximate data from the graph</caption> <thead> <tr> <th>Temperature (°C)</th> <th>50mm</th> <th>100mm</th> <th>150mm</th> <th>200mm</th> <th>250mm</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> <td>0.00</td> </tr> <tr> <td>10</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> <td>0.05</td> </tr> <tr> <td>20</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> <td>0.10</td> </tr> <tr> <td>30</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> <td>0.15</td> </tr> <tr> <td>40</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> <td>0.20</td> </tr> </tbody> </table>										Temperature (°C)	50mm	100mm	150mm	200mm	250mm	0	0.00	0.00	0.00	0.00	0.00	10	0.05	0.05	0.05	0.05	0.05	20	0.10	0.10	0.10	0.10	0.10	30	0.15	0.15	0.15	0.15	0.15	40	0.20	0.20	0.20	0.20	0.20
Temperature (°C)	50mm	100mm	150mm	200mm	250mm																																									
0	0.00	0.00	0.00	0.00	0.00																																									
10	0.05	0.05	0.05	0.05	0.05																																									
20	0.10	0.10	0.10	0.10	0.10																																									
30	0.15	0.15	0.15	0.15	0.15																																									
40	0.20	0.20	0.20	0.20	0.20																																									

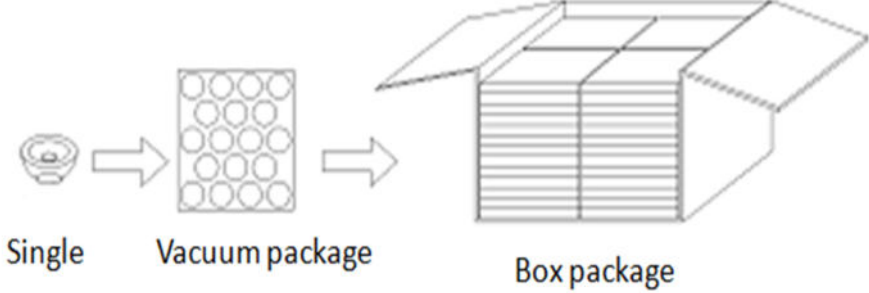PN		HK-83@22-15-D12-20-1g-1		Product Name		HK 83@22-15°Lens	
Product material		PC		Customer			
Package diagram		 <p style="text-align: center;"> <span>Single</span>      <span>Vacuum package</span>      <span>Box package</span> </p>					
Product packing		5		A/ Box		4	
		6		Layer/Box		120	
		Box/Layer					
		A/ Carton					
Packaging Materials	NO.	Part No	Part name	Size	Dosage	Unit	Remarks
	1	2.07.0065	Blister box	23cm*21cm	24	BAG	
	2	2.08.0001	PE film	25cm*27cm	24	PCS	
	3	2.06.0005	Reel label paper	62mm*42mm	24	PCS	
	4	2.06.0005	Box label paper	62mm*70mm	1	PCS	
	5	2.06.0003	big plate	46cm*42cm	7	PCS	
	6	2.06.0015	big flat carton	48cm*44cm*19cm	1	PCS	
Remarks	The loose packing is not subject to this specification. Customer's requirements shall prevail						

Special notice

When glue pass through holes, columns and other structures, or part of the thin structure, will form a weld line. The product which uses multi-point injection welding line will appear because of the combination of sol, as shown below:

Syntner

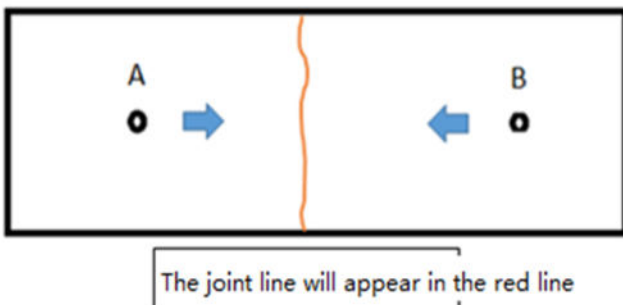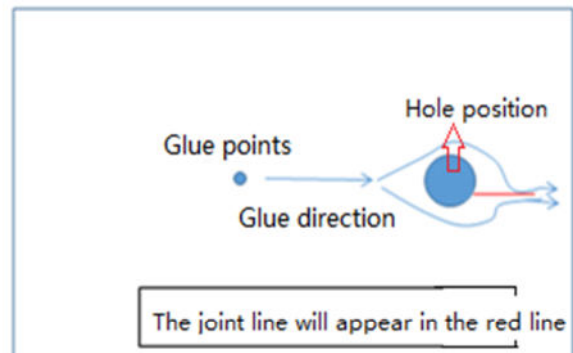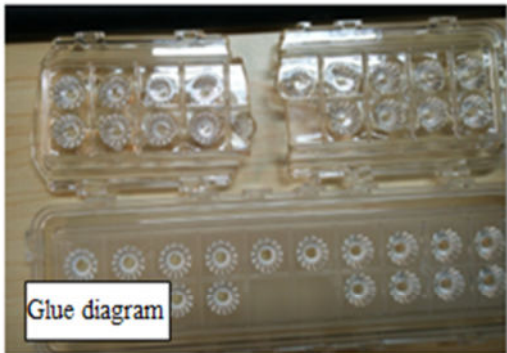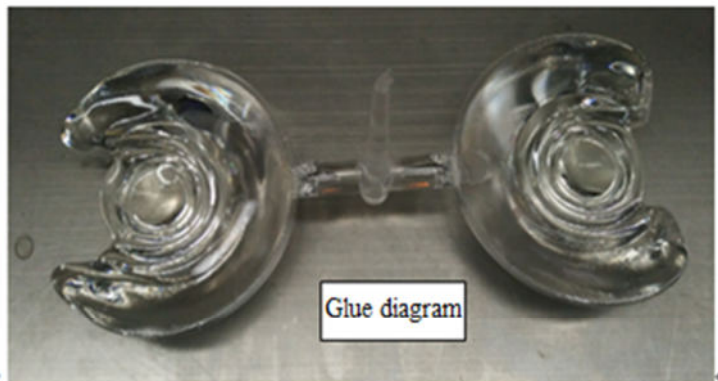

Please note :

The appearance of lines in the structure of the product as well as at the screw hole is a normal phenomenon, will not affect the actual use of the product, and can not be avoided at this stage.



## Appearance inspection standards

### 1 Operating procedures

#### 1.1.1 Sampling standards, sampling plan and AQL

Test level : GB/T2828.1-2012 The first part is according to the acceptance quality limit (AQL) retrieval batch inspection sampling plan, general inspection level II level, CR class defect coefficient 0, MA defect rejection level AQL = 0.65, MI class defect rejection level AQL = 1.0; defect level please see 5.4.

#### 2 Code table

Code	Code description	Unit	Code		Code description	Unit
N	Amount/pcs	pcs	D		Diameter	mm
L	Length	mm	H		Depth	mm
W	Width	mm	DS		Distance	mm
S	Proportion	mm <sup>2</sup>	SS		Offset	mm

### 3 Test conditions

3.1 Sight distance and working hours: Sight distance should be 30-35cm, each side of the inspection time does not exceed 12s, the visual angle of 45-135 degrees;

3.2 Light: 2x40w cool white fluorescent lamp, the light source is 500-550mm away from the lens surface; in order to make the appearance defect can be correctly recognized, the illumination should be 500-1000Lux, and the observation time is 10 seconds.

3.3 Visual inspection staff should be 1.0 (including corrected visual acuity) above, no color blindness, color weakness.

### 4 Appearance inspection standards

Test items	Judging standard	Inspection equipment	Defect level		
		Testing method	MI	MA	CR
Check the sample	When start the machine and process, all products have to check the appearance of the sample, the appearance of the sample is divided into qualified samples and limited samples.	Sample comparison , visual			
	1: Qualified sample refers to the appearance and structure standard of the product which recognized by the client, the sample size should be confirmed before mass production;				

	2: The limited sample refers to the limit of a particular exceptionally developed sample. Limit the sample only for its specific point of exception to confirm; The priority is higher than the other criteria in this table. When there is a limited sample, the limit sample shall prevail.				
Raw edge	Not allowed to affect the size and assembly	Visual, point card		√	
Scratch	1: Non-optical surface and non-exposed surface scratches should be visually insignificant and the length is less than 1/10 of the maximum surface size.	Visual, point card, calipers		√	
Fingerprint	Fingerprints are not allowed on all products	Visual		√	
Foreign objects, black spots, white spots	The product may not be attached to foreign objects, including oil, fiber, dregs of water gap and so on				√
Deformation	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces.	Visual, feeler			√
Poor ejection	Products may not appear bad ejection, including no convex top, thimble printed on the assembly surface shall not be higher than the product surface, non-assembled surface thimble height should not exceed the product size tolerances; thimble printing should be less than the product surface and no more than 0.3; thimble surface treatment should be consistent with the product side.	Visual, point card		√	
	Ejection strain: the optical surface and the appearance of the exposed surface after assembly are not allowed to have a strain, and the structural surface does not allow visual obvious strain.				
Insufficient filling	Insufficient filling shall not affect the appearance of the assembly and the exposed surfaces , The signature sample shall prevail.	Visual, point card		√	
Shrink	When the entire surface of the product shrinks, the optical properties and dimensions must meet the requirements, and the visual will not significantly affect the appearance.Part shrink reference point defects	Visual, point card		√	
Flow marks、Welding line	1 : Product does not allow the presence of flow marks and welding lines unless the structure can not be avoided;	Visual		√	
	2: The remaining flow marks shall not appear in the optical surface, a single L ≤ 10mm, no more than two				

Bubble	No bubbles are allowed	Visual		√	
Foreign objects, black spots, white spots	Not obvious or $D \leq 0.3\text{mm}$ black spots and foreign bodies in the area of 100x100mm not more than 1; Exceeded foreign matter black spots is judged bad.	Visual, point card	√		
Damaged	No damage is allowed	Visual			√
Cold glue	Optical surface may not have cold glue, non-optical surface cold glue should meet the visual is not obvious.	Visual	√		
Bad incision	1: Do not affect the product size, shall not penetrate the optical surface, the cut should be smooth;	Visual			√
	2: Laser cutting products, the optical surface burns shall not occur after the processing is completed. Beading must not affect product installation				
	3: Three molds and hot runner gate shall not appear residue.				
Scrub	Scrub surface should be uniform, off the scrub phenomenon should not be obvious , A single off scrub imprint requires $D \leq 1\text{ mm}$ and no more than 1 area within a 50x50 mm area	Visual		√	